

SecurePlus System

Switching ON and OFF:

The SecurePlus System is automatically switched ON and OFF when the vehicle ignition is switched ON and OFF.

Operation Prior to Starting a Journey:

1. Wait until all passengers are seated and are secured in their seats.
2. Switch the vehicle's ignition ON.
3. Check that the number of seat icons shown on the display unit corresponds with the number of compatible seats installed.

Analyse and remedy the cause (e.g. seat added but not set up), if the numbers do not correspond.

4. Check the display unit to ensure that all compatible seats that are occupied are shown as occupied by a person wearing a seat belt (green seat symbols).
5. Make sure that all passengers are properly secured by the personal safety systems provided for this purpose.
6. Do not start a journey until this has been done.

Behaviour in the Event of a Warning After Starting a Journey:

After starting a journey, a person not wearing a safety belt on a seat detected as occupied is indicated by a red seat icon on the display unit. The alarm signal sounds for 30 seconds.

1. Check the seat belts of all passengers and make certain that any seat belts that have been unfastened are fastened again.

These brief operating instructions do not in any way replace the full Operating Instructions! Please read the full Operating Instructions thoroughly before using the product for the first time!

Subject to technical modifications.



AMF-Bruns GmbH & Co. KG
Hauptstraße | 26689 Apen | Germany
Telephone +49 (0) 4489 / 72 72 22
Telefax +49 (0) 4489 / 62 45
service.hubmatik@amf-bruns.de
www.amf-bruns.de

Brief Operating Instructions

SECUREPLUS SYSTEM

Bluetooth seat detection



Keep these Brief Operating Instructions close to hand in the vehicle!
Read the Operating Instructions thoroughly before using the ramp!



www.amf-bruns.de



The SecurePlus System



The AMF-Brunns SecurePlus System continually informs the driver about the status of the vehicle's rear seats when the ignition is switched ON. It gives information as to whether one or more seats are being monitored and whether or not the persons occupying the seats are wearing their seat belts.






In order for seats to be detected by the SecurePlus System, these must be fitted with the corresponding equipment and be connected to the system by Bluetooth. The connections to the seats must first be set up (pairing). After this has been done, it is possible to remove or re-fit seats without pairing.



Seats in the first row, other original seats, wheelchair spaces and other incompatible seats will not be detected by the system.

Depending upon the version, the display unit can detect up to nine or up to twenty seats in a vehicle.

The SecurePlus System fulfils the requirements of the EU Directive ECE R16.

Display Unit and Acoustic Signal:

Display unit	Meaning / acoustic signal
	<p>Display unit for 9 seats:</p> <p>The seats are displayed as seat icons in three rows and three columns. Each seat is assigned to a fixed display position.</p>
	<p>Display unit for 20 seats:</p> <p>The seats are displayed as seat icons in four rows and five columns. Each seat is assigned to a fixed display position.</p>
	<p>White seat icon:</p> <ul style="list-style-type: none"> the seat is connected. The seat is unoccupied.
	<p>Green seat icon:</p> <ul style="list-style-type: none"> the seat is connected. The seat is occupied. The person is wearing a safety belt.
	<p>Red seat icon:</p> <p>Seat status:</p> <ul style="list-style-type: none"> the seat is connected. The seat is occupied. The person is not wearing a safety belt. <p>Accompanying acoustic signal:</p> <ul style="list-style-type: none"> A person is not wearing a safety belt when beginning a journey: 60 seconds after switching the ignition ON, a warning signal sounds for 30 seconds, it then changes to an alarm signal which sounds for 30 seconds. A person who was already wearing a safety belt has unbuckled it: The alarm signal sounds immediately for 30 seconds. If several persons unbuckle their safety belts, the alarm signals can overlap and sound for longer than 30 seconds.

Display unit	Meaning / acoustic signal
	<p>No seat icon at a display position:</p> <ul style="list-style-type: none"> No seat is connected to this display position.
	<p>Text "LOW BATTERY" and a seat symbol blinking (independent of status):</p> <p>The battery in the seat, whose seat symbol is blinking, is weak and must be replaced.</p>

⚠ Danger! If passengers are not properly secured in the vehicle, there is a risk of fatal injury for the occupants in the event of an accident or in the event of abrupt driving manoeuvres.

- The SecurePlus System only serves as a reminder and support for the driver of the vehicle.
- Check that the number of seats shown matches the number of seats fitted.
- Make sure that all passengers are properly secured at all times by the personal safety systems provided for this purpose.
- Children, child seats and persons sitting on cushions might not be reliably detected by the system.
- Unoccupied child seats must also be correctly secured (Iso-Fix and/or seat belt).

⚠ Danger! The button cell batteries fitted to the seats can become accessible when seats are rotated, folded or removed from the vehicle. There is a risk of poisoning or fatal injury if batteries are swallowed.

⚠ Danger! If the display positions are not assigned sensibly during installation or if seats in the vehicle are repositioned after the SecurePlus System has been set up, there is a risk of the seats being confused.